

A36 Wall Mounted Models



Premium Tandem Arm™



Standard Tandem Arm™



Premium Slim Line



Standard Slim Line

Specifications by Configuration

PREMIUM TANDEM

- Work Surface with spill retaining lip: 21.5" w x 11" d
- Comfort Grip Actuator automatically locks height position – improved stability
- Pre-Wired USB to Keyboard Drawer
- Mounting Track: 34" h x 5" w
- Dual pivot points; 180° rotation each
- Keyboard extends 32" from wall
- Shuttle maintains distance from wall during full height adjustment range
- Rotational lock can limit rear pivot to 90° right or left to protect corners or prevent equipment interference
- Depth when stowed: 7 3/8"

STANDARD TANDEM

- Height Adjustment Brake improves stability
- Mounting Track: 34" h x 5" w
- Dual pivot points; 180° rotation each
- Keyboard extends 32" from wall
- Shuttle maintains distance from wall during full height adjustment range
- Rotational lock can limit rear pivot to 90° right or left to protect corners or prevent equipment interference
- Depth when stowed: 7 1/8"

PREMIUM SLIM LINE

- Work Surface with spill retaining lip: 21.5" w x 11" d
- Comfort Grip Actuator automatically locks height position – improved stability
- Pre-Wired USB to Keyboard Drawer
- Depth when stowed: 4 1/8"

STANDARD SLIM LINE

- Height Adjustment Brake improves stability
- Depth when stowed: 4"

All A36 Models

GENERAL

- 5 year Mechanical; 2 year Electrical Warranty
- Smooth, cleanable surfaces
- Internal cable management
- Tech Box CPU storage: 2.6" h x 9.9" w x 10" d; 7.1 lbs.
- Tech Box Power: 3 AC outlets
- Tech Box Security: single key lock
- External CPU storage: 2-8" w
- 15" locked position height adjustment
- 30° monitor tilt
- 1 Mouse/Scanner holder
- Accommodates 7" deep x 18" wide keyboards
- Contoured handles for easy adjustment
- Maximum footprint: 34" h x 25 1/8" w x 7 3/8" d
- Accepts monitors up to 24" and 18 lbs.
- Installation in 3 steps or less
- Bi-Directional Mouse Pad: 9.5" w x 8 1/4" d
- Integrated wrist rest

OPTIONS

- LED task light with auto-shut off
- Additional Mouse/Scanner Holder
- Height adjustable monitor bracket: 5" additional height adjustment; 20° tilt; portrait/landscape
- LCD access pack organizes med cups, tape, and alcohol wipes
- Keyboard Tilt

keyboard tilt



SUITED FOR

- Bedside documentation
- Clinical documentation
- e-Mar/Bar-coding implementations
- Medication and Supply preparation
- Patient registration
- Physician order entry/rounds
- Med/Surg, Emergency, Ambulatory/Outpatient, OR's ICU, Clinics



SERVICE GUARANTEE

We are committed to providing best in class service to maximize your uptime. Our service guarantee includes:

- 2 hour response time
- Parts shipped next business day
- Help desk support
- Dedicated Technical Account Manager



Visit Rubbermaidmedical.com or call 888-859-8294 to see our complete line of medical products



Tandem Arm™ and Slim Line Wall Mounted Workstations





Medical Solutions

The Tandem Arm™ by Rubbermaid redefines the wall mounted workstation. Dual arms moving in tandem provide best in class stability and range of motion; while the work surface facilitates med preparation and supply accessibility.

Clinical Presence

The Rubbermaid Arms are designed to promote a professional appearance specific to healthcare environments with internal cable management, concealed technology, and neutral color pallet.

- Best-in-class wall footprint and appearance when stowed
- Smooth surfaces are easy to clean for improved infection control
- Integrated storage of select CPU's improves aesthetics and security
- Dedicated channels for cable management improve installation and conceal unsightly cables



Slim Line stowed position shown below



lighted work surface



keyboard drawer extension



LCD access pack



monitor adjustment



maximum range of motion



comfortable handles and actuator



Usability

Best in class ergonomics, smooth surfaces, and dedicated comfort grips improve clinician interaction with the product and encourage bedside use of EMR.

- Generous 21.5" w x 11" d work surface with spill retaining lip for supplies and medications
- Task light with auto shut-off illuminates the work surface for nighttime use
- Keyboard drawer extension with integrated wrist rest reduces strain
- Locked position height adjustability ensures stability and eliminates "creep"
- LCD access pack organizes essential supplies for medication administration including medication cups, medical tape, and alcohol wipes
- 5" of individual monitor height adjustment

Patient Interaction

Intuitive and simple adjustments over a wide range of motion allow clinicians to achieve eye contact with patients when using EMR software.

- Dual pivot points maximize rotational range of motion
- Dual handles provide comfort grip for stable movement and adjustability
- 15" of locked position height adjustment with comfort grip actuator to facilitate sit to stand interaction

Patents Pending

Support Requirements

Rubbermaid Arms ship assembled and are engineered to reduce cost of ownership through minimal installation requirements and serviceability.


Easy to Install

- ✓ Product arrives assembled
- ✓ Set plate with marked measurement simplifies track installation



Easy to Integrate technology

- ✓ Technology Box secures and conceals select CPU's to improve aesthetics
- ✓ Pre-wired hospital grade power strip with 3 outlets
- ✓ Pre-wired USB extension to keyboard drawer
- ✓ Dedicated channels for cable management conceal and organize excess cable
 - Cables route through side channels – Technology Box – arms – out to wall on Tandem models
 - Cables route through side channels – Technology Box – out to wall on Slim Line models

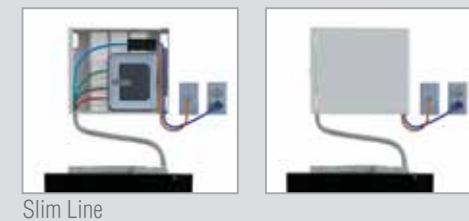

Easy to Maintain

- ✓ Single key for Technology Box enables easy fleet management
- ✓ Pre-wired power and USB extension simplify replacement of CPU and Keyboard
- ✓ Internal cables and smooth surface improve cleanability
- ✓ End user access to CPU power eliminates unnecessary trouble tickets



Support Requirements