

C36 Wall Mounted Models



Non-Locking Cabinet



PIN Code Locking Cabinet

All C36 Models

**GENERAL**

- 5 year Mechanical; 2 year Electrical Warranty
- Smooth, cleanable surfaces
- Internal cable management
- Tech Box CPU storage: 2.6" h x 9.9" w x 10" d; 7.1 lbs.
- Tech Box Power: 3 AC outlets
- Tech Box Security: single key lock
- Dual port Pre-Wired USB to Keyboard Drawer for keyboard and mouse
- Accommodates 7" deep x 18" wide keyboards
- Mouse storage in keyboard drawer
- Compact footprint: 46" h x 22 1/2" w x 4" d
- Accepts monitors up to 24"
- 2 Step Installation; Mounting Plate and Cabinet
- Work Surface: 20 1/2" w x 10" d
- Bi-Directional Mouse Pad: 10" w x 9 1/2" d
- Integrated wrist rest
- Keyboard extends 22" from wall
- Integrated Task Light with auto on/off; controlled by work surface deployment
- Software managed auto log-off or screen saver; controlled by closure of work surface

**PIN CODE LOCKING**

- 4-digit PIN Code
- 128 Unique PIN Code capacity;
  - Managed locally or over network
  - Manual Override Key

**FINISH PANELS**

- 4 Standard Finishes available
- 17 Special Order Finishes available
  - 25 Cabinet Minimum Order Quantity

**OPTIONS**


- Up to 2 ventilation fans may be installed for maximum ventilation

**SUITED FOR**

- Bedside documentation
- Hallway Access point for EMR
- Clinical documentation
- Medication and Supply preparation
- Patient registration
- Physician order entry/rounds
- Med/Surg, Emergency, Ambulatory/Outpatient, OR's ICU, Clinics


Available Finishes

**STANDARD FINISHES**

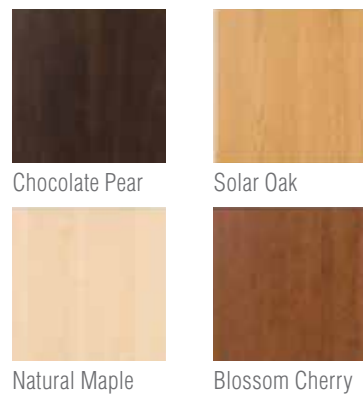

**SPECIAL ORDER FINISHES**

- 25 Cabinet Minimum Order Quantity

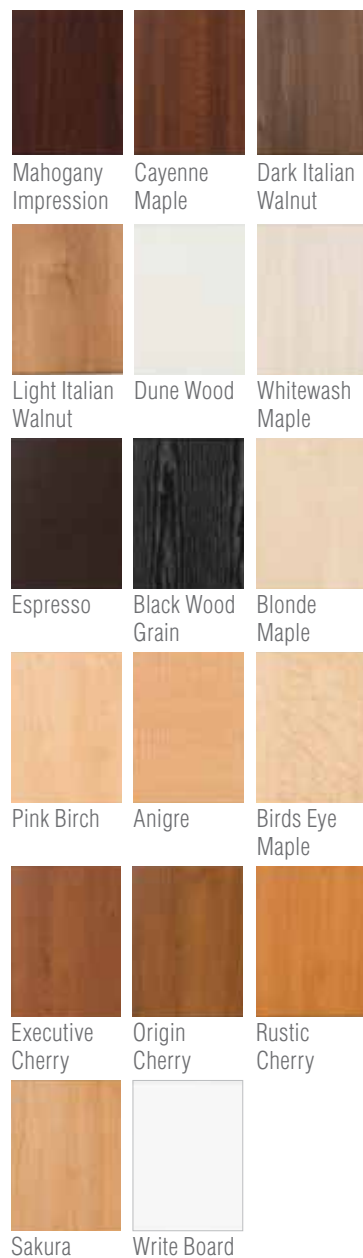

**SERVICE GUARANTEE**

We are committed to providing best in class service to maximize your uptime. Our service guarantee includes:

- 2 hour response time
- Parts shipped next business day
- Help desk support
- Dedicated Technical Account Manager



Visit [Rubbermaidmedical.com](http://Rubbermaidmedical.com) or call 888-859-8294 to see our complete line of medical products



# Wall Cabinet Workstations





## Medical Solutions

Our Wall Cabinet Workstation is designed to provide maximum aesthetic flexibility and best-in-class performance.

Innovative features, advanced keyless entry system, and exceptional serviceability make our new Wall Cabinet the easy choice for your demanding clinical environment.

## Clinical Presence

Designed to promote a professional appearance specific to healthcare with industry leading finish selection. Replaceable panels ensure the premium appearance is maintained long after installation.

- Standard and Special Order finishes cover a wide range of decor
- Compact design limits space requirements
- Smooth surfaces, including PIN Code Lock membrane, are easy to clean for improved infection control
- Dedicated cable management channels conceal cables



superior finish selection



protective frame



## Usability

Clinician interaction with the product is improved through ergonomic positioning of the keyboard and monitor. The addition of a work surface, large mousing area and integrated task light makes this the most user friendly workstation on the market

- Generous 20.5" w x 10" d dedicated work surface for paperwork, supplies, and medications
- Auto on/off Task Light to reduce visual strain and for nighttime use
- Keyboard drawer extension with integrated wrist rest reduces strain
- Communicate information with the integrated hospital-grade Write Board
- Unique user codes make secure access to EMR simple
- Extra Large Right/Left Mouse pads provide ample space for point and click software applications



generous work surface



task light




extra large mouse pads

## Support Requirements

Rubbermaid Cabinets ship assembled and are engineered to reduce cost of ownership through minimal installation requirements and serviceability.

### Easy to Install

- ✓ Product arrives assembled and ready to install in 2 easy steps
- ✓ Mounting plate with marked measurements simplifies installation

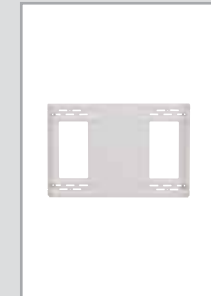

step 1



step 2

### Easy to Integrate technology

- ✓ Technology may be integrated in a central location for drop-on installation
- ✓ Dual USB Extenders to keyboard drawer for mouse and keyboard reduces integration time
- ✓ Technology box has 3-outlet hospital grade power strip



### Easy to Maintain

- ✓ End-User access to CPU power eliminates unnecessary trouble tickets
- ✓ Top and bottom panels and the exterior frame are field replaceable to address unsightly dings and dents
- ✓ Secure CPU storage with a single key for easy fleet management
- ✓ Set the cabinet to automatically log the clinician off the software application or go to screen saver when the door is closed



Support Requirements

stowed position shown below