

Mobile Technology Cabinet



Front View Collapsed



Side View Collapsed  
Side View Extended\*



Front View Open

All MTC Models

**GENERAL**

- Base size: 17" x 22"
- Height adjustment: 16" locked position gas shock
- Front and side handles
- Work Surface size: 19" w x 11" d
- Accommodates 7 1/4" d x 18" w keyboards
- Integrated wrist rest
- Internal Scanner storage 2 1/8" x 3"
- Casters: 4" precision bearing casters/2 locking
- Smooth, cleanable surfaces
- 2 1/2 ft hospital grade spiral cord extends to 8 ft; Extended cords available
- Internal CPU storage compartment: 19 1/4" w x 3" d x 10" h
- Internal monitor storage compartment: 18 3/4" w x 3 1/4" d x 24" h
- 3 available power outlets
- Keyboard height: 30" - 46"

**WARRANTY**

- 3 year mechanical; 3 year electrical
- Extended warranty available (please inquire)

**SUITED FOR**

- Bedside documentation
- Clinical documentation
- eMAR/Bar-coding implementations
- Patient registration
- Physician order entry

**NON-POWERED CARTS**

- Configurations starting at 97 lbs
- Accommodates full PC and monitor
- External spiral cord; always plugged in

**ALL POWERED CARTS**

- Configurations starting at 128 lbs
- Batteries: SLA AGM 35 amp
- Certified to UL 60601-01 standards for patient point of contact
- Input 120V 60HZ; Charger: 10 amp SLA
- Automatic transfer switch enables full use of PC without affecting battery charge time
- Gentle shut-down at critically low power level
- Auto shut-down of PC prevents deep discharge
- Software tracks battery age and notifies when replacements are due
- Email setup sends cart specific critical alerts
- Eye level battery charge indicator

**DC POWERED CARTS**

- High efficiency system provides optimal run-time
- 3 DC adapter power outlets
- Supplemental on-screen battery monitor indicates time remaining

**LITHIUM IRON PHOSPHATE (LiFePO4) BATTERY**


- Available on the AC Power System
- 40 amp LiFePO4 provides 5 times longer life than SLA
- Charging time: 2 hours
- 65% lighter weight than SLA equivalent

**OPTIONS**

- White board back panel
- Task Light


Available Finishes

**STANDARD FINISHES**

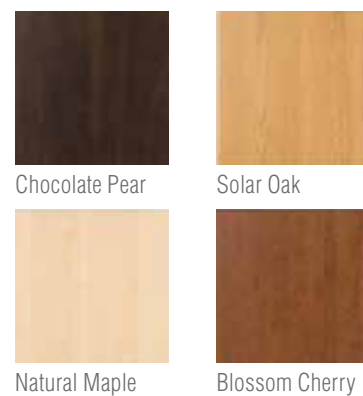

**SPECIAL ORDER FINISHES**

- 25 Cabinet Minimum Order Quantity

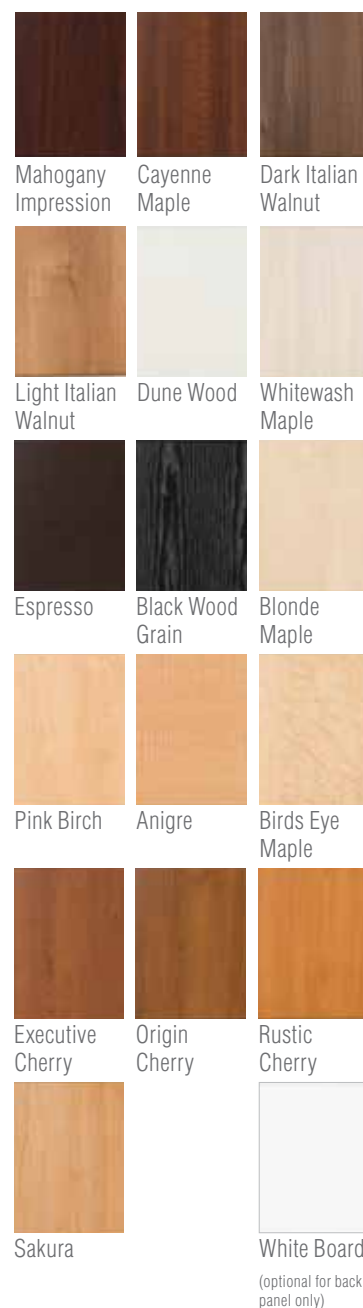

**SERVICE GUARANTEE**

We are committed to providing best in class service to maximize your uptime. Our service guarantee includes:

- 2 hour response time
- Parts shipped next business day
- Help desk support
- Dedicated Technical Account Manager



Visit [Rubbermaidmedical.com](http://Rubbermaidmedical.com)  
or call 888-859-8294 to see our complete line of medical products



# Mobile Technology Cabinet





## Medical Solutions

Rubbermaid continues to lead the way in the innovation of EMR access points. The new Mobile Technology Cabinet blends premium cabinet aesthetics into the flexibility of a mobile computer cart. Information at the Point-of-Care has never looked so good.

Clinician friendly features enhance patient interaction and make the new Mobile Technology Cabinet the easy choice for your demanding clinical environment.

## Clinical Presence

Extensive finish selection, concealed technology, and clean lines enhance décor.

- 20 Finishes available in standard and special order cover a wide range of décor
- When closed, technology is completely concealed
- Compact footprint limits space requirements
- Internal cable management

20 finishes



16" height adjustment



work surface



easy to grip handles



optional back panel white board



supports barcode at bedside



## Usability

Features designed for optimized in-room maneuverability, smooth surfaces, and ergonomics improve clinician interaction with the cart.

- 19" w x 11" d work surface with raised edge to retain paperwork, supplies, and medications
- Integrated wrist rest improves comfort for data entry
- 16" locked position height adjustment allows sit to stand comfort
- Optional keyboard light reduces visual strain and supports nighttime use
- Easy to grip handles provide comfortable maneuverability from any position when open or closed
- Smooth surfaces and infection control focused wrist rest improve cleanability
- Ergonomic positioning of the keyboard and monitor improve end user ergonomic comfort

## Patient Interaction

The slim form factor and rich feature set optimize time spent and eye contact with the patient.

- Sit or stand at the point of care with all necessary supplies
- Full maneuverability allows easy positioning for patient eye contact
- Integrated scanner storage makes patient and EMR interaction easy
- Use the optional white board surface to educate and interact with patients

## Workflow

Rubbermaid Medical carts are developed to improve workflow for nurses with end user focused features and lithium batteries for extended run-time.

- Lithium battery options
  - Maximizes up-time
  - Minimizes charge time and overall weight
- In-Room Workflow model supports CPOE, Clinical Documentation and barcode scanning at the bedside

## Support Requirements

### Easy to Select your Power System

Multiple power systems and battery options available; each with unique features tailored to fit a variety of workflow, technology and budgetary needs.


BATTERY OPTIONS	Rubbermaid NON-POWERED	Rubbermaid AC POWERED HIGH EFFICIENCY		Rubbermaid DC POWERED HIGH EFFICIENCY
		LiFePO4	SLA	SLA
KEY BENEFITS	Lightest Weight Tethered Power provides "home base" Lowest total cost of ownership: overall	Longest Battery Life Span Shortest Charging Time Lightest Weight powered option Lowest Total Cost of Ownership: power system	Low acquisition cost Upgradable to LiFePO4	Optimized run-time with SLA

### Easy to Upgrade

Cart upgradeability extends the useful life of your carts.

#### POWER UPGRADE:

- ✓ Non-powered carts are upgradable to accept power systems accommodating changes in technology, workflow, and user preference
- ✓ SLA batteries are easily upgraded to Lithium batteries to minimize weight, support costs and maximize up-time

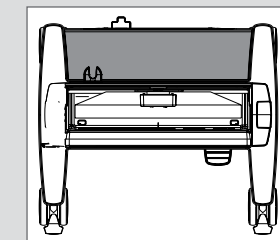

### Easy to Integrate

- ✓ Secure CPU storage with a single key for easy fleet management
- ✓ Technology box has 3-outlet hospital grade power strip
- ✓ Generous technology cavity accommodates a wide range of CPUs and cable management
- ✓ Internal cable management and ample room for excess cable storage

### Easy to Maintain

End-User access to CPU power eliminates unnecessary trouble tickets

#### POWER SYSTEM SOFTWARE

- ✓ Wirelessly monitors and logs system performance
- ✓ Email notification of low charge level prevents workflow interruption
- ✓ Proactive battery replacement notification

#### WARRANTY

- ✓ Next business day on-site service and parts as necessary
- ✓ Standard coverage:
  - 3 years mechanical
  - 3 years electrical
- ✓ Extended coverage available up to 5 years

Support Requirements

MTC below shown in Blonde Maple

